

LED RGBW Controller



Parameter:

RGBW Receiver:

 
- Model: M4-3A
- Power Input: 12-24Vdc
- Max Current Load: 3Ax4CH Max 12A
- Max Output Power: (0~36...72W)x4CH
- Working Temp.: -30°C~55°C
- Dimensions: L125xW33xH20(mm)
- Weight(N.W.): 60g

RGBW Remote:


- Model: M4/M8
- Working Voltage: 3Vdc (battery CR2032)
- Working Frequency: 433.92MHz
- Remote Distance: 40m~50m
- Working Temp.: -30°C~55°C
- Remote Dimensions: L104xW58xH9(mm)
- Remote Weight(N.W.): 42g




Dimensions:

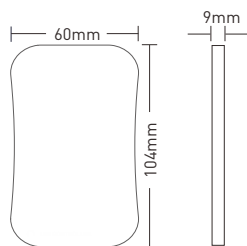

Remote

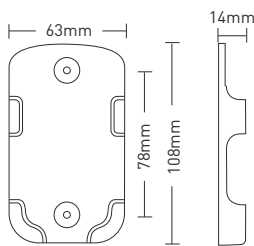 

Remote Holder

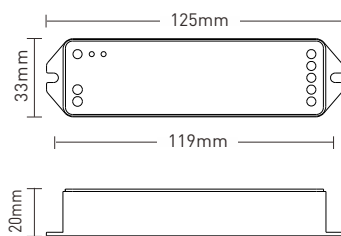 



Receiver

Package:



Blister package

  Operating Instruction for Remote:

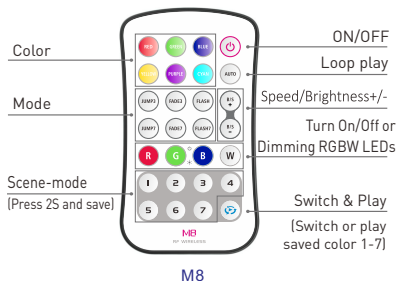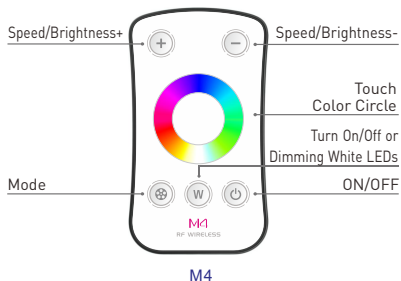

M4 Changing Mode Table

No.	Mode	No.	Mode
1	Static Red	7	Static White
2	Static Green	8	RGB Skipping
3	Static Blue	9	7 Colors Skipping
4	Static Yellow	10	RGB Color Smooth
5	Static Purple	11	Full-color Smooth
6	Static Cyan	12	Static Black


The Learning ID Method:

Remote has been matched to the receiver before leave factory, if deleted accidentally, you can learn ID as follow.

Learning ID: Short Press "ID learning button" on the M4-3A receiver, the running light is on, then press any key on M4/M8 remote, the running light flashes several times, activated.

Canceling ID: Press "ID learning button" on the M4-3A receiver for 5 seconds.

 Operating Instruction for Receiver:

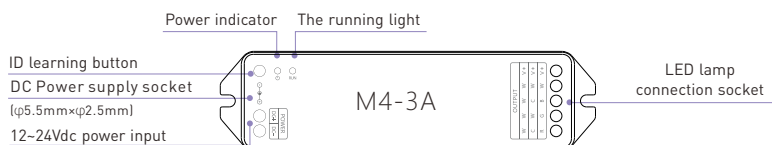

Wiring Diagram:



LED RGBW控制器



技术参数:

RGBW恒压接收器:

 
- 产品型号: M4-3A
- 电压输入: 12~24Vdc
- 最大负载电流: 3A×4路 最大12A
- 最大负载功率: 144W/288W(12V/24V)
- 工作温度: -30°C~55°C
- 产品尺寸: L125×W33×H20mm
- 重量(净重): 60g

RGBW遥控器:


- 产品型号: M4/M8
- 工作电压: 3Vdc(battery CR2032)
- 工作频率: 433.92MHz
- 遥控距离: 40~50米
- 工作温度: -30°C~55°C
- 产品尺寸: L104×W60×H9mm
- 重量(净重): 42克




产品尺寸:

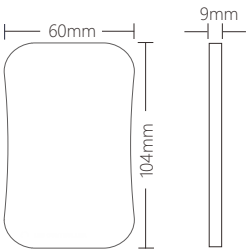

遥控器

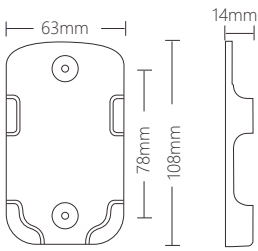 

挂墙底座

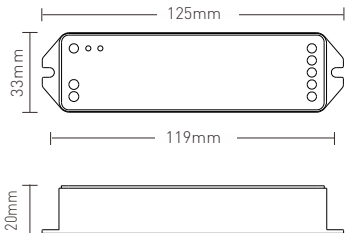 

控制器

 
产品包装:



套装

遥控按键功能:

休眠功能 当M4遥控器30秒无人操作后，可自动进入待机状态以延长电池使用时间，再次按4个按键中任意1个即可唤醒。

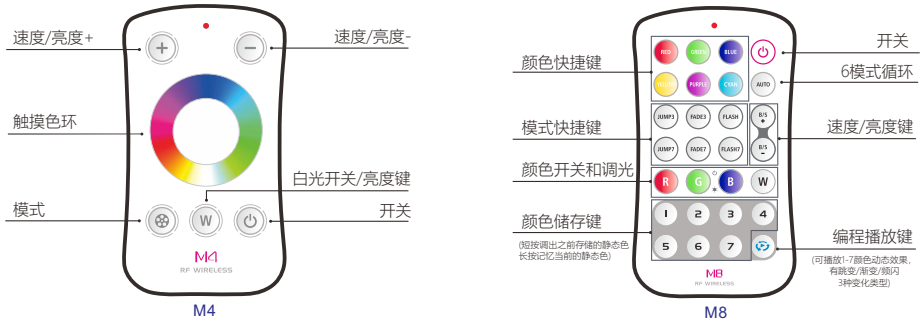

M4变化模式选择列表

序号	变化模式	序号	变化模式
1	静态红色	7	静态白色
2	静态绿色	8	三色跳变
3	静态蓝色	9	七彩跳变
4	静态黄色	10	三色渐变
5	静态紫色	11	七彩渐变
6	静态青色	12	静态黑色

ID学习方法

出厂遥控器与接收器已经配好，如果不慎删除了，可以通过下面方法学习：

学习ID：短按一下接收器M4-3A学习键，运行灯变为常亮，再按M4/M8遥控器任意按键，运行灯快闪几下，学习成功。

删除ID：长按接收器M4-3A学习键5秒，删除成功。

接收控制器部件说明:



连线示意图:

